


Koganei Clean System products provide complete support for the maintenance of a clean environment inside the cleanroom.

Koganei Clean System products meet the needs of the ultra-clean production environment. In everything from actuators and valves to air preparation and auxiliary equipment, anti-corrosion materials processing and other Koganei-developed design concepts serve to prevent particle contamination within the cleanroom. These perfectly designed mechanisms, which resolve even the slightest leaks to the outside during operations, have already won a high level of reliability.

Koganei Cleanliness

There is currently no standard in JIS or elsewhere for methods of evaluating cleanliness for pneumatic equipment in the cleanroom specifications. Therefore, to measure the effects of cleanroom contamination by pneumatic equipment, Koganei has decided to use “number of particles generated per 10 operations,” rather than particle density. Koganei has also developed classifications for application classes in cleanroom, based on JIS and other upper limit density tables, and on the company’s own experience.

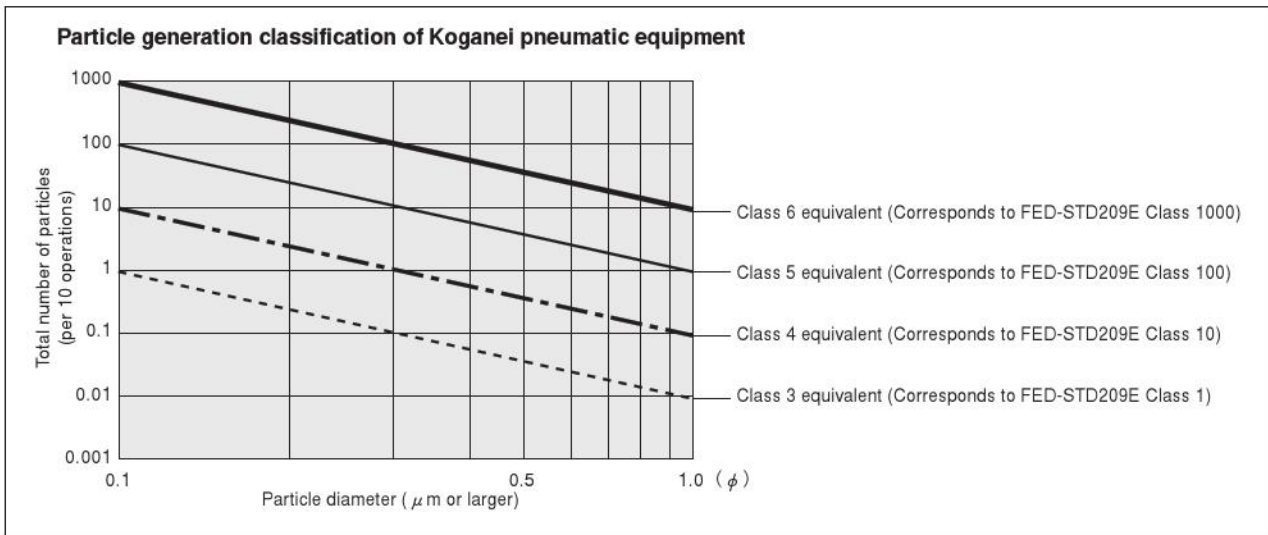

- Remarks:
1. In the above table, product performance in terms of the number of particles generated per 10 operations is expressed as the upper limit of particles corresponding to the equivalent JIS or ISO class.
 2. In the above table, values in the JIS, ISO, and FED-STD upper limit density tables are calculated as upper density per liter.
 3. The classes shown are clean levels as classified in JIS and ISO.

From the above definitions, the Koganei clean level classes can be viewed as the level of average contamination per liter of surrounding air over a period of 10 operations in cleanroom. Air ventilation in cleanrooms is usually faster than 1 cycle per minute, and clean volumetric capacity is usually larger than 1 liter, which should provide a sufficient safety margin in practice.

Caution: The above conclusions are based on an ideal situation in which air ventilation is being implemented. For specific cases where air ventilation is not ensured, caution is needed since the clean classes cannot be maintained.

The clean system diagrams shown here are for Class 5 equivalent products. For Class 4 or Class 3 equivalent products, consult us.


Evaluations of Cleanliness

Koganei has therefore specified its in-house measurement methods, to conduct evaluations on the cleanroom rating.

The number of particles of the Air Cylinder Cleanroom Specification is measured as shown in the method below.

1. Measurement conditions

1-1 Test circuit: Figure 1 (no suction), Figure 2 (with suction)

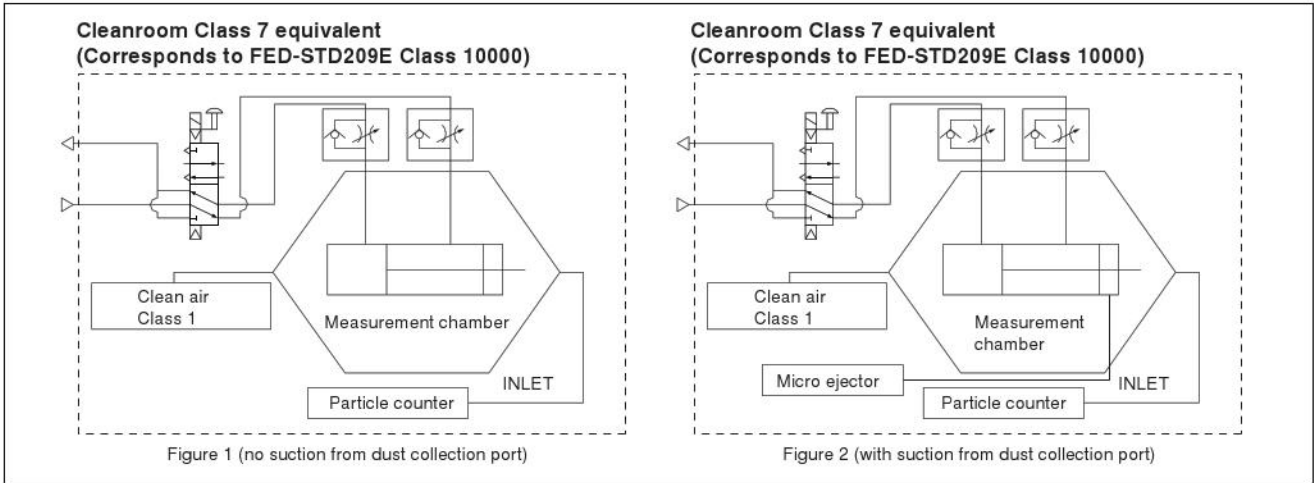

1-2 Operating conditions of tested cylinder

Operating frequency: 1Hz

Average speed: 500mm/s [20in./sec.]

Applied pressure: 0.5MPa [73psi.]

Suction condition: Microejector ME05, Primary side: 0.5MPa [73psi.] applied, Tube: $\phi 6$ [0.236in.]

Mounting direction: Vertical

Chamber volume: 8.3 ℓ [0.293ft³]

2. Particle counter

Manufacturer/model: RION/KM20

Suction flow rate: 28.3 ℓ /min [1ft³/min.]

Particle diameter: 0.1 μm , 0.2 μm , 0.3 μm , 0.5 μm , 0.7 μm , 1.0 μm

3. Measurement method

3-1 Confirmation of number of particles in the measurement system

Under the conditions in the above 1 and 2, using a particle counter to measure the sample for 9 minutes without operating the measurement sample, and confirmed the measured number of particle is 1 piece or less.

3-2 Measurement under operation

Under the conditions in the above 1 and 2, operating the measurement sample for 36 minutes, and measured the total values in the latter half of 18 minutes test.

3-3 Reconfirmation


Performed the measurement in 3-1 again, to reconfirm the number of particles in the measurement system.

4. Measurement results

● Cleanroom specification

Jig Cylinder (no suction from dust collection port)


Particle generation over 1 million operations (CS-CDA16 \times 30)

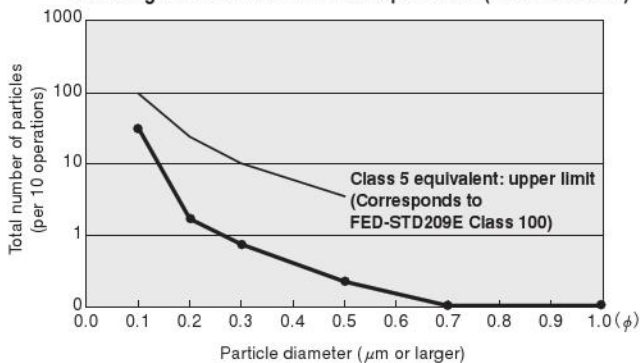

● Cleanroom specification

Slim Cylinder (with suction from dust collection port)

Particle generation over 1 million operations (CS-DA20 \times 100)

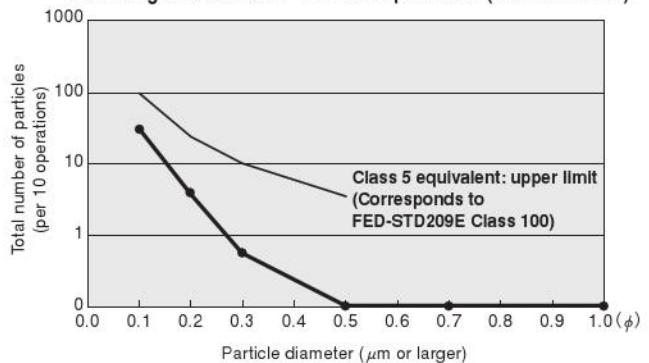


For "safety precautions" listed in the Clean System Product Drawings, see the materials below.

- For actuators, see "Safety Precautions" on p. 45 of the Actuators General Catalog .
- For valves, see "Safety Precautions" on p. 31 of the Valves General Catalog.
- For air treatment and auxiliary equipment, see "Safety Precautions" on p.31 of the General Catalog of Air Treatment, Auxiliary, Vacuum.

Specifications

Media	Air
Maximum operating pressure	0.9MPa [131psi.]
Operating vacuum pressure	-100kPa [-29.5in.Hg]
Operating temperature range	0~60°C [32~140°F]
Recommended tube	Nylon tube, urethane tube
Sales unit	1 pc.

Order Codes

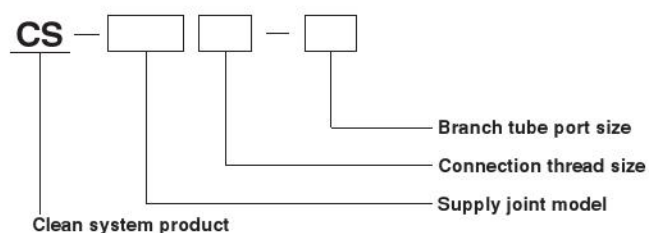

● CS-STQ: Terminal quick



Main side thread size	Sub-main side tube size mm					
	4	6	8	10	12	16
M8X1 (8)	8-4	8-6	—	—	—	—
M12X1 (12)	—	12-6	12-8	—	—	—
M14X1 (14)	—	—	14-8	14-10	14-12	—
M18X1 (18)	—	—	—	—	18-12	18-16

● CS-STB: Terminal branch



Main side thread size	Sub-main side tube size mm	
	10	12
M14X1 (14)	14-10	—
M18X1 (18)	—	18-12

● CS-STS: Terminal straight



Main side thread size	Sub-main side thread size			
	M8X1	M12X1	M14X1	M18X1
M12X1 (12)	12-8	12-12	—	—
M14X1 (14)	—	12-14	14-14	—
M18X1 (18)	—	—	18-14	18-18

● CS-STT: Terminal taper



Main side thread size	Sub-main side thread size				
	M5X0.8	M6X1	Rc1/8	Rc1/4	Rc3/8
M8X1 (8)	8-M5	8-M6	8-01	—	—
M12X1 (12)	—	12-M6	12-01	—	—
M14X1 (14)	—	—	14-01	14-02	—
M18X1 (18)	—	—	—	18-02	18-03

Note: For details of the dimensions, see the General Catalog of Air Treatment, Auxiliary, Vacuum.

● CS-SBA: Bushing A



Main side thread size	Sub-main side thread size (R)			
	1/8	1/4	3/8	1/2
M8×1 (8)	8-01	—	—	—
M12×1 (12)	12-01	12-02	12-03	—
M14×1 (14)	—	14-02	14-03	14-04
M18×1 (18)	—	—	18-03	18-04

● CS-SBB: Bushing B



Main side thread size	Sub-main side thread size		
	M8×1	M12×1	M14×1
M12×1 (12)	12-8	—	—
M14×1 (14)	—	14-12	—
M18×1 (18)	—	—	18-14

● CS-SBC: Bushing C



Main side thread size	Sub-main side thread size			
	M5	M6	Rc1/8	Rc1/4
M8×1 (8)	8-M5	—	—	—
M12×1 (12)	—	12-M6	—	—
M14×1 (14)	—	—	14-01	—
M18×1 (18)	—	—	—	18-02

● CS-SLB: Elbow



Main side thread size	Sub-main side thread size (Rc)			
	1/8	1/4	3/8	1/2
M8×1 (8)	8-01	—	—	—
M12×1 (12)	12-01	12-02	—	—
M14×1 (14)	—	14-02	14-03	14-04
M18×1 (18)	—	—	18-03	18-04

● CS-SST: Socket



Main side thread size	Sub-main side thread size (Rc)			
	1/8	1/4	3/8	1/2
M8×1 (8)	8-01	—	—	—
M12×1 (12)	—	12-02	—	—
M14×1 (14)	—	—	14-03	—
M18×1 (18)	—	—	—	18-04

● CS-SKR: Reducer for bulkhead



Main side thread size	Sub-main side tube size				
	4	6	8	10	12
M8×1 (8)	8-4	8-6	—	—	—
M12×1 (12)	—	12-6	12-8	12-10	—
M14×1 (14)	—	—	14-8	14-10	14-12
M18×1 (18)	—	—	—	—	18-12

● CS-SPG: Plug



Thread size	
M8×1	8
M12×1	12
M14×1	14
M18×1	18

● CS-SCP: Cap



Thread size	
M8×1	8
M12×1	12
M14×1	14
M18×1	18

● CS-SBN: Nipple



Thread size	
M8×1	8-8
M12×1	12-12
M14×1	14-14
M18×1	18-18

● CS-SZB: Bracket



Model	Mounting model
6	SPG, SCP
12	SKR8-4
14	SKR□-6
16	SKR□-8
20	SKR□-10
22	SKR□-12
61	SPG, SCP
62	SPG, SCP

● CS-SZS: Wrench for assembling



Size		mm
Width across flats	Thickness	
10×12	3.4	
14×17		
19×22	4	
24×27		

- Thin wrenches, specially designed for the supply joints.
- Sales unit : 1 set

Note: For details of the dimensions, see the General Catalog of Air Treatment, Auxiliary, Vacuum.